

PRODUCING THE  
HIGHEST QUALITY  
QUICKNUTS FOR  
OVER 25 YEARS!!






**HAWEKA**<sup>®</sup>

**USA**

The **Revolution**  
in **Wheel Balancing**<sup>™</sup>


**Models: 1200, 1220, 1250, 1400, 1420, 1450, 1500, 1520, 1550, 1650, 1820 and 1850.**

**Shaft: 40mm**  
(Clamping hoods sold separately)

Drawing	Description	Part #
	<i>ProGrip QuickNut</i> OPTION 1	143 404 003
	<i>ProGrip QuickNut w/ turning knobs</i> OPTION 2	143 404 006
	<i>Steel ProGrip QuickNut</i> OPTION 3	140 404 033




**Models: 5100, 5223, 5500 and 5600 Serial # 51-0623 and lower**

**Shaft: 28mm**

	<i>ProGrip QuickNut Kit for Accuturn®</i> Includes QuickNut, clamping hood & 28mm shaft	124 597 050
---	--	-------------

**Models: \*5100, 5223, 5500 & 5600 Serial # 51-0623 thru 51-1457**



**Shaft: 40mm**  
(Clamping hoods sold separately)

	<i>ProGrip QuickNut</i> OPTION 1	143 403 003
	<i>ProGrip QuickNut w/ turning knobs</i> OPTION 2	143 403 006
	<i>Steel ProGrip QuickNut</i> OPTION 3	140 403 033

**\*NOTE:** Accuturn 5100, 5223, 5500 & 5600 models changed shaft diameters during mid-production. These models started production with a 28 mm shaft then changed to a 40 mm shaft. The shaft diameter for these models must be verified before ordering. (See Kit for the 5100, 5223, 5500 & 5600 28mm options)



**All Models 5800 & 6000.**

**Shaft: 40mm**  
(Clamping hoods sold separately)

Drawing	Description	Part #
	<b>ProGrip QuickNut</b>  OPTION 1	<b>143 403 003</b>
	<b>ProGrip QuickNut w/ turning knobs</b>  OPTION 2	<b>143 403 006</b>
	<b>Steel ProGrip QuickNut</b>  OPTION 3	<b>140 403 033</b>



**Models: 6100, 6600, 6700 and 6800**

**Shaft: 36mm**  
(Clamping hoods sold separately)

	<b>ProGrip QuickNut</b>  OPTION 1	<b>143 363 003</b>
	<b>ProGrip QuickNut w/ turning knobs</b>  OPTION 2	<b>143 363 006</b>

**Models: All Models**




**Shaft: 40mm**  
(Clamping hoods sold separately)

Drawing	Description	Part #
	<i>ProGrip QuickNut</i> OPTION 1	143 403 003
	<i>ProGrip QuickNut w/ turning knobs</i> OPTION 2	143 403 006
	<i>Steel ProGrip QuickNut</i> OPTION 3	140 403 033

# BOSCH

**Models: All Models**

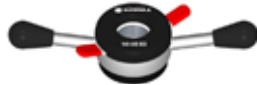

**Shaft: 40mm**  
(Clamping hoods sold separately)

Drawing	Description	Part #
	<i>ProGrip QuickNut</i> OPTION 1	143 404 003
	<i>ProGrip QuickNut w/ turning knobs</i> OPTION 2	143 404 006
	<i>Steel ProGrip QuickNut</i> OPTION 3	140 404 033




# CEMB

**Models: All Models prior to 1995**

**Shaft: 36mm**  
(Clamping hoods sold separately)

Drawing	Description	Part #
	<i>ProGrip QuickNut</i> OPTION 1	143 363 003
	<i>ProGrip QuickNut w/ turning knobs</i> OPTION 2	143 363 006




**Models: All Models 1995 and later**
**Shaft: 40mm**  
(Clamping hoods sold separately)


Drawing	Description	Part #
	<b>ProGrip QuickNut</b>  OPTION 1	<b>143 404 003</b>
	<b>ProGrip QuickNut w/ turning knobs</b>  OPTION 2	<b>143 404 006</b>
	<b>Steel ProGrip QuickNut</b>  OPTION 3	<b>140 404 033</b>




**PRODUCING THE  
HIGHEST QUALITY  
QUICKNUTS FOR  
OVER 25 YEARS!!**



## Models: 700, 800, 825, 850, 925, 950, 1000, 1025, 1050, 1055, & 1250

With OEM 28mm shaft		Models: 700, 800, 825, 850, 925, 950, 1000, 1025, 1050, 1055, & 1250	Shaft: 28mm
Drawing	Description	Part #	
	<p><b>ProGrip QuickNut kit for Coats®</b></p> <p>Replaces OEM shaft and nut</p> <p>Includes QuickNut, clamping hood &amp; shaft</p>	<b>124 937 003</b>	
	<p><b>28mm to 40 mm Conversion shaft kit for Coats® balancers</b></p> <p>Provides larger shaft to support alloy wheels</p> <p>Includes QuickNut, clamping hood, upgrade shaft, spring &amp; 4 piece cone kit.</p> <p style="text-align: right;"><i>*(Post March 1992 balancers only)</i></p>	<b>124 937 150</b>	
	<p><b>ProGrip QuickNut</b></p> <p>For 28mm aftermarket Haweka replacement shaft only. Will not work on OEM shaft. (Clamping hoods sold separately)</p>	<b>143 283 003</b>	

Previously upgraded to OEM 40mm shaft		Models: 700, 800, 825, 850, 925, 950, 1000, 1025, 1050, 1055, & 1250	Shaft: 40mm (Clamping hood included)
	<p><b>Steel ProGrip QuickNut</b></p>	<b>124 408 005</b>	

Previously upgraded to Haweka brand 40mm shaft		Models: 700, 800, 825, 850, 925, 950, 1000, 1025, 1050, 1055, & 1250	Shaft: 40mm (Clamping hoods sold separately)
	<p><b>ProGrip QuickNut</b></p> <p style="text-align: right;">OPTION 1</p>	<b>143 403 003</b>	
	<p><b>ProGrip QuickNut w/ turning knobs</b></p> <p style="text-align: right;">OPTION 2</p>	<b>143 403 006</b>	
	<p><b>Steel ProGrip QuickNut</b></p> <p style="text-align: right;">OPTION 3</p>	<b>140 403 033</b>	




**Models: 775, 875, 1175, and 6275HS**

**Shaft: 40mm**  
(Clamping hood included)

Drawing	Description	Part #
	<p><b>Steel ProGrip QuickNut</b></p>	<p><b>124 408 005</b></p>

**Models: XR Balancers**

**Shaft: 40mm**  
(Clamping hoods sold separately)


	<p><b>ProGrip QuickNut</b></p> <p style="text-align: right;">OPTION 1</p>	<p><b>143 404 003</b></p>
	<p><b>ProGrip QuickNut w/ turning knobs</b></p> <p style="text-align: right;">OPTION 2</p>	<p><b>143 404 006</b></p>
	<p><b>Steel ProGrip QuickNut</b></p> <p style="text-align: right;">OPTION 3</p>	<p><b>140 404 033</b></p>

**Models: 6200HS**

**Shaft: 28mm**  
(Clamping hoods sold separately)

	<p><b>ProGrip QuickNut w/ turning knobs</b></p>	<p><b>143 285 006</b></p>
--	---	---------------------------

**Order a shaft gauge for correct shaft identification.**

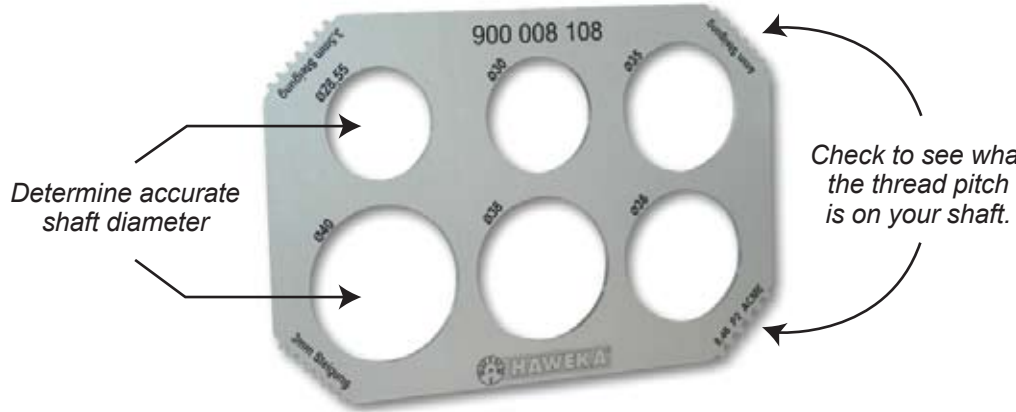

Determine accurate shaft diameter

Check to see what the thread pitch is on your shaft.

Great for determining which Coats® shaft you have.

**Shaft Gauge**



**900 008 108**

**Models: All Models prior to 2007**

**38mm**

**Shaft: 38mm**

(Clamping hoods sold separately)




Drawing	Description	Part #
	<p><i>ProGrip QuickNut</i></p> <p>OPTION 1</p>	<p>143 383 003</p>
	<p><i>ProGrip QuickNut w/ turning knobs</i></p> <p>OPTION 2</p>	<p>143 383 006</p>

**Models: All Models 2007 and later**

**40mm**

**Shaft: 40mm**

(Clamping hoods sold separately)



	<p><i>ProGrip QuickNut</i></p> <p>OPTION 1</p>	<p>143 403 003</p>
	<p><i>ProGrip QuickNut w/ turning knobs</i></p> <p>OPTION 2</p>	<p>143 403 006</p>
	<p><i>Steel ProGrip QuickNut</i></p> <p>OPTION 3</p>	<p>140 403 033</p>

COSENG / ATLAS

**Models: C301, C311, 322, and C366**




**Shaft: 36mm**

(Clamping hoods sold separately)

Drawing	Description	Part #
	<p><i>ProGrip QuickNut</i></p> <p>OPTION 1</p>	<p>143 363 003</p>
	<p><i>ProGrip QuickNut w/ turning knobs</i></p> <p>OPTION 2</p>	<p>143 363 006</p>

**Models: All Models**




**Shaft: 40mm**  
(Clamping hoods sold separately)

Drawing	Description	Part #
	<p><i>ProGrip QuickNut</i></p> <p style="text-align: right;">OPTION 1</p>	<p>143 404 003</p>
	<p><i>ProGrip QuickNut w/ turning knobs</i></p> <p style="text-align: right;">OPTION 2</p> <p style="color: red; text-align: center;">Required for Hand Spin Models</p>	<p>143 404 006</p>
	<p><i>Steel ProGrip QuickNut</i></p> <p style="text-align: right;">OPTION 3</p>	<p>140 404 033</p>

HOFMANN®



**Models: All Models**

**Shaft: 40mm OEM**  
(Clamping hoods sold separately)

Drawing	Description	Part #
	<p><i>ProGrip QuickNut</i></p> <p style="text-align: right;">OPTION 1</p>	<p>143 404 003</p>
	<p><i>ProGrip QuickNut w/ turning knobs</i></p> <p style="text-align: right;">OPTION 2</p>	<p>143 404 006</p>
	<p><i>Steel ProGrip QuickNut</i></p> <p style="text-align: right;">OPTION 3</p>	<p>140 404 033</p>


**Models: 700 and DSP9500 from 1990 - 1992**

**Shaft: 40mm**  
(Clamping hoods sold separately)

Drawing	Description	Part #
	<p><i>ProGrip QuickNut</i></p> <p style="text-align: right;">OPTION 1</p>	<p>143 403 003</p>
	<p><i>Steel ProGrip QuickNut</i></p> <p style="text-align: right;">OPTION 2</p>	<p>140 403 033</p>

**Models: All other balancers**



**Shaft: 40mm**  
(Clamping hood included)

	<p><i>Steel ProGrip QuickNut</i></p>	<p>124 408 005</p>
--	--------------------------------------	--------------------

## LAUNCH

**Models: All Models**



**Shaft: 36mm OEM**  
(Clamping hoods sold separately)

Drawing	Description	Part #
	<p><i>ProGrip QuickNut</i></p> <p style="text-align: right;">OPTION 1</p>	<p>143 363 003</p>
	<p><i>ProGrip QuickNut w/ turning knobs</i></p> <p style="text-align: right;">OPTION 2</p>	<p>143 363 006</p>

## RANGER




**Models: DST-1000 and R-1500**

**Shaft: 36mm OEM**  
(Clamping hoods sold separately)

Drawing	Description	Part #
	<p><i>ProGrip QuickNut</i></p> <p style="text-align: right;">OPTION 1</p>	<p>143 363 003</p>
	<p><i>ProGrip QuickNut w/ turning knobs</i></p> <p style="text-align: right;">OPTION 2</p>	<p>143 363 006</p>

**Models: All Models**


**Shaft: 40mm**  
(Clamping hoods sold separately)

Drawing	Description	Part #
	<i>ProGrip QuickNut</i> OPTION 1	143 403 003
	<i>ProGrip QuickNut w/ turning knobs</i> OPTION 2	143 403 006
	<i>Steel ProGrip QuickNut</i> OPTION 3	140 403 033

# SNAP ON®




**Models: All models with 28mm shafts**

**Shaft: 28mm**  
(Clamping hoods sold separately)


Drawing	Description	Part #
	<i>ProGrip QuickNut w/ turning knobs</i>	143 285 006

**Models: All models with 40mm shaft**

**Shaft: 40mm**  
(Clamping hoods sold separately)

	<i>ProGrip QuickNut</i> OPTION 1	143 404 003
	<i>ProGrip QuickNut w/ turning knobs</i> OPTION 2	143 404 006
	<i>Steel ProGrip QuickNut</i> OPTION 3	140 404 033

## Replacement Kit for 28mm shaft


Drawing	Description	Part #
	<p><b>ProGrip QuickNut kit for Snap On 28mm</b>                      Replaces OEM shaft and nut                      Includes QuickNut, clamping hood &amp; shaft</p>	<p><b>124 957 050</b></p>

## Models: All 28mm previously upgraded to Haweka shaft


**Shaft: 28mm**  
(Clamping hoods sold separately)

	<p><b>ProGrip QuickNut</b></p>	<p><b>143 283 003</b></p>
---	--------------------------------	---------------------------

## Upgrade: 28mm to 40mm Conversion Shaft Kit

	<p><b>28mm to 40 mm Conversion shaft kit for Snap On balancers</b>                      Provides larger shaft to support alloy wheels                      Includes QuickNut, clamping hood, upgrade shaft, spring &amp; 4 piece cone kit.</p>	<p><b>124 957 150</b></p>
--	--	---------------------------

## Order a shaft gauge for correct shaft identification.

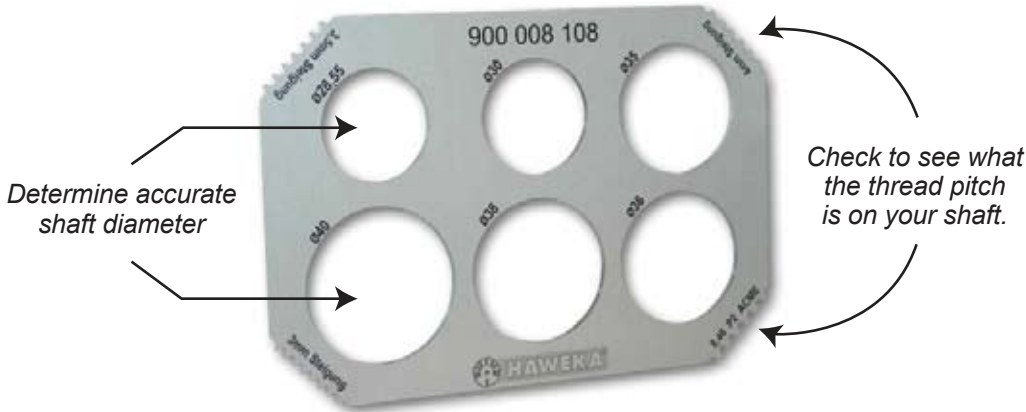 <p>Determine accurate shaft diameter</p> <p>Check to see what the thread pitch is on your shaft.</p> <p><b>Great for determining which Snap On® shaft you have.</b></p>	<p><b>Shaft Gauge</b> <b>900 008 108</b></p>
--	--